
Appendix 1. Soil Screening Flow Chart

Acronyms:

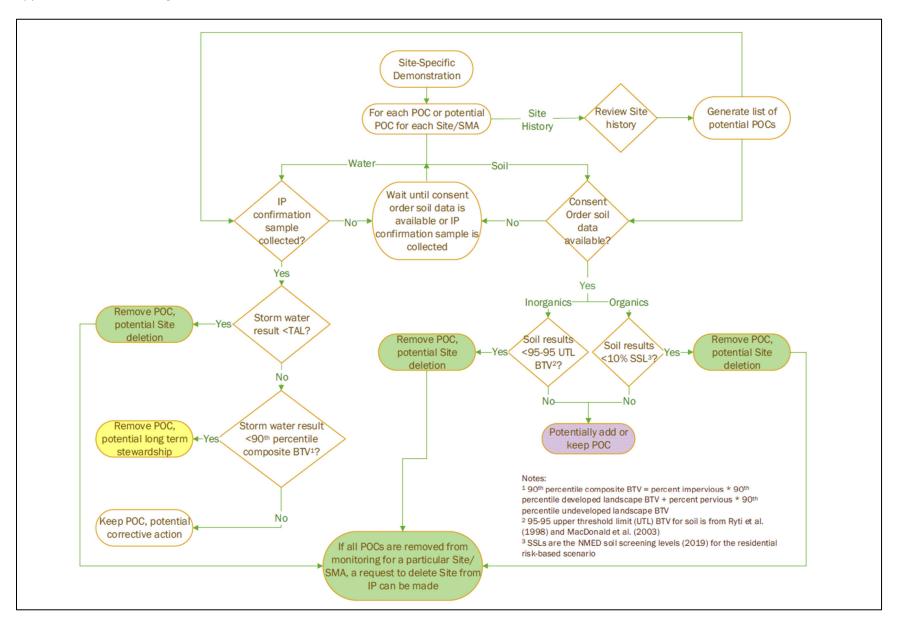

POC = pollutant of concern; SMA = site monitoring area; IP = individual permit; TAL = target action limit; BTV = background threshold value; UTL = upper threshold limit; SSL = soil screening level